

Single Hole Lavatory Faucet with Pop-Up Drain Installation Instructions


CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi*

* If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (RPV).





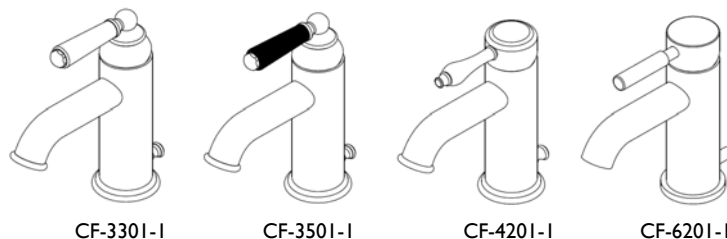


INSTALLING FAUCET TO SINK/DECK

- Insert O-RING (2) into bottom of BASE RING (1) and center over sink/deck THROUGH-HOLE (3)

NOTE: Recommended sink/deck THROUGH-HOLE is $\varnothing 1\text{-}\frac{3}{8}"$

- Attach LIFT ROD (4) to LIFT ROD GUIDE (5) and insert into bottom of BODY (6)
- Insert FLEX HOSE (7) (one at a time), LIFT ROD (4) and THREADED ROD (8) through BASE RING (1) and sink/deck THROUGH-HOLE (3)
- Place BODY (6) on top of BASE RING (1)
- From underside of sink/deck THROUGH-HOLE (3), place MOUNTING BRACKET (9) and NUT (10) onto THREADED ROD (8)
- Tighten NUT (10) until BODY (6) and BASE RING (1) is secure to sink/deck

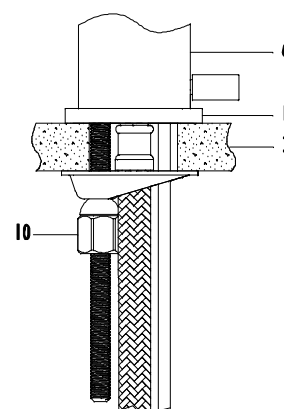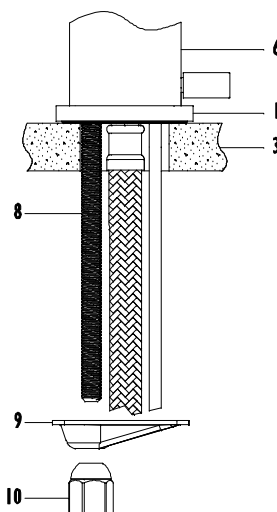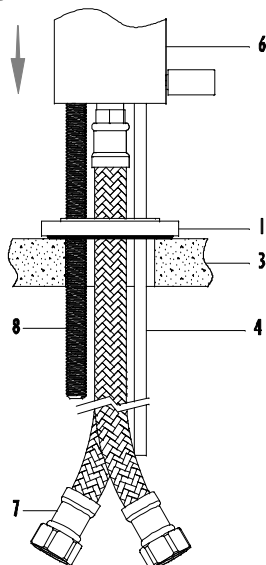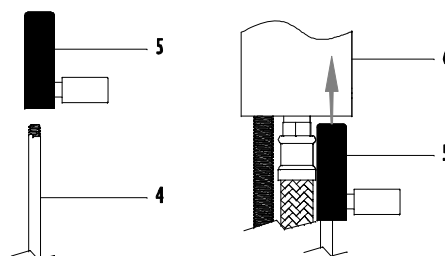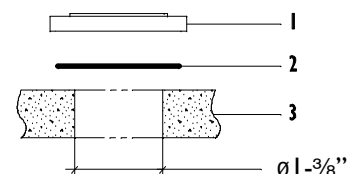

2

INSTALLING POP-UP DRAIN


- Remove COLLAR (12) from pop-up assembly and apply SILICONE CAULK (13) (or equivalent) to underside of COLLAR (12)

CAUTION: Do not use or any oil base sealant that may damage finish

- Insert DRAIN BODY (15) from underside through sink DRAIN HOLE (14) & attach to COLLAR (12)
- Align BALL ROD HOLE (15a) toward LIFT ROD (4) and firmly tighten FLANGE NUT (18) against FRICTION WASHER (17), MACK WASHER (16) and sink DRAIN HOLE (14)
- Remove TAILPIECE (19) from DRAIN BODY (15), apply thread sealant to TAILPIECE (19) threads and tighten into DRAIN BODY (15)
- Insert STOPPER (11) into COLLAR (12) & rotate EYE-SCREW (11a) to accept BALL ROD (20)

NOTE: If necessary, adjust stopper eye-screw height by loosening LOCK NUT (11b) and rotating EYE-SCREW (11a), retighten LOCK NUT (11b)

- Remove spring CLIP (23) from BALL ROD (20)
- Remove NUT (22) and both CONE WASHERS (21) from DRAIN BODY (15) and place on BALL ROD (20) as shown
- Insert BALL ROD (20) with CONE WASHERS (21) into BALL ROD HOLE (15a) and through EYE-SCREW (11a)
- Tighten NUT (22), but allow BALL ROD (20) to freely move up and down
- Place STRAP (24) onto LIFT ROD (4) and tighten THUMB-SCREW (24a)
- Place one end of CLIP (23) onto BALL ROD (20), then STRAP (23), gently squeeze CLIP (23) and slide other end of CLIP (23) onto BALL ROD (20)
- Check proper operation of STOPPER (11) and adjust by sliding STRAP (24) on LIFT ROD (4)

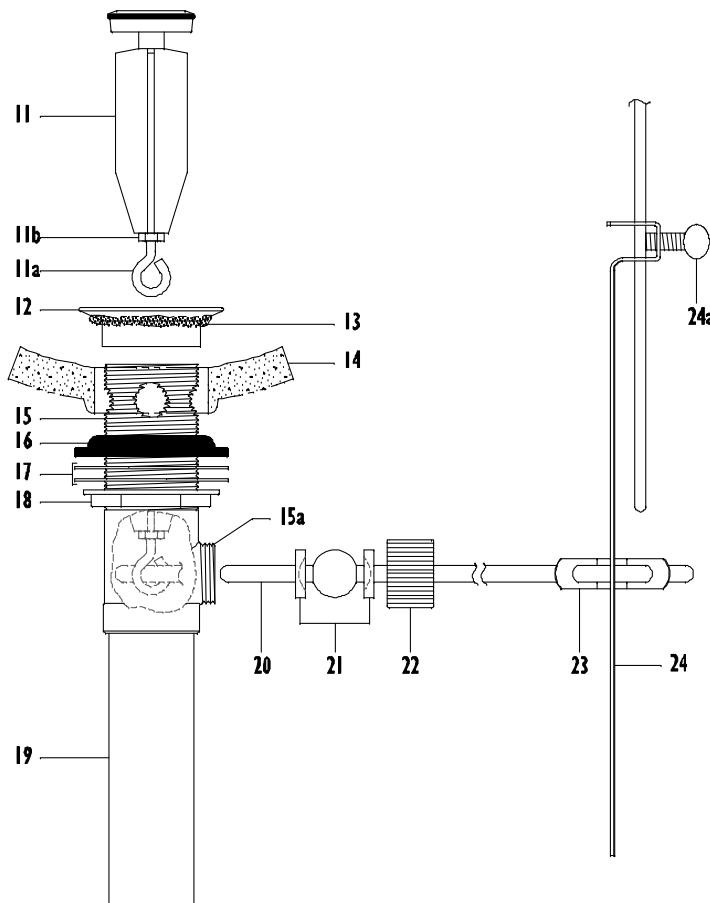

3

SUPPLY & WASTE CONNECTIONS

- Connect blue colored FLEX HOSE (7) to cold SUPPLY VALVE (25) and red colored FLEX HOSE (7) to hot SUPPLY VALVE (25)


IMPORTANT: Flush supply lines and valves prior to installation to prevent damage and malfunction of cartridge

- Connect waste P-TRAP (26) to drain TAILPIECE (19)

NOTE: Supply valves and P-Trap are not supplied with faucet. See CAL TRIM for complete selection of matching products in desired finish

- Turn on cold and hot SUPPLY VALVES (25)
- Slowly open faucet lever by lifting lever and rotate to left and right
- Check all connections for leaks and repair as necessary
- Give these instructions and Blue Plastic Aerator Key to consumer for safe keeping

NOTE: Occasionally, due to water conditions it may be necessary to remove aerator and clean debris off with soft bristle toothbrush

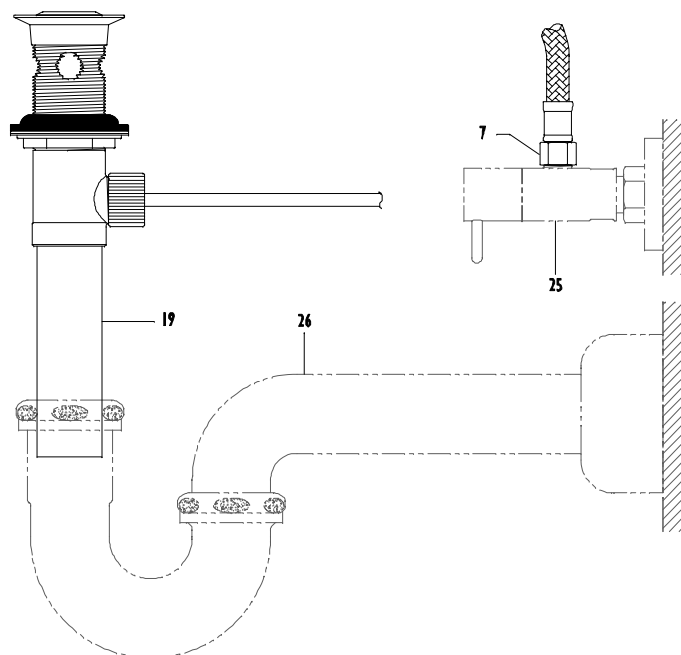

www.calfaucets.com

5231 Argosy Ave. Huntington Beach, CA 92649
800-822-8855