

BIDET SINGLE HOLE - TWO HANDLE


INSTALLATION INSTRUCTIONS

IMPORTANT

All *California Faucets*® products are engineered to provide quality performance provided they are installed and operated properly. To fully enjoy the comfort, safety, and reliability of your new Bidet, please follow the instructions below.

California Faucets reserves the right to make modification and specification changes at any time.
Please visit www.calfaucets.com for most current technical data.

Fig. 1

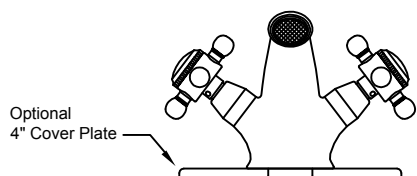

Installation Instructions

This Fitting is available with an optional 4" cover plate

1 Install Bidet Valve

- Install all thread into bottom of bidet body.
- Place flat rubber washer under bidet body.
- Install flex lines below bidet body. Do not over-tighten.
- Insert bidet body through top of deck and set.
- Place O-ring inside of horseshoe retaining washer and place over all thread and secure with supplied brass nut.

2 Install pop-up assembly.

- Separate drain collar from pop-up assembly.
- Apply silicon caulking to underside of drain collar. **NOTE: Do not use "Plumbers Putty" or any oil based sealants! Use of anything other than silicon caulking will VOID the finish warranty.**
- Insert drain body from underside through sink. Slowly screw on drain collar, align with ball rod hole facing back wall, then gently pull down into sink and firmly tighten brass nut from below.
- Remove tailpiece from drain body and apply teflon tape, approx. 3 to 5 wraps around threads and reinstall into bottom of drain body.
- Insert stopper in collar and hold with eye-screw hole facing back. If necessary, adjust stopper eye-screw height by loosening lock nut and rotating counter-clockwise. Tighten lock nut (**See Fig. 3**).
- Remove spring clip from ball rod.
- Remove nut and cone washers and slide onto end of ball rod.
- Insert ball rod into drain body below so short end of ball rod end fits in stopper eye-screw hole. Snug ball rod nut (do not over tighten). Ball rod must move up & down freely (**See Fig. 3**).
- Insert lift rod through top of spout and then through hole rod strap underneath sink. Tighten thumb-screw of hole rod strap against lift rod and connect to ball rod by gently pinching locking spring clip and sliding one side of spring clip onto ball rod.
- Insert hole strap onto ball rod, then pinch spring clip together to fit on ball rod.

NOTE: Flush hot and cold supply lines before connecting faucets to supply risers. Failure to do so could result in voiding of warranty.

3 Connect flex lines to water supplies.

4 Connect your waste "P" trap to the drain tailpiece.

Fig. 2

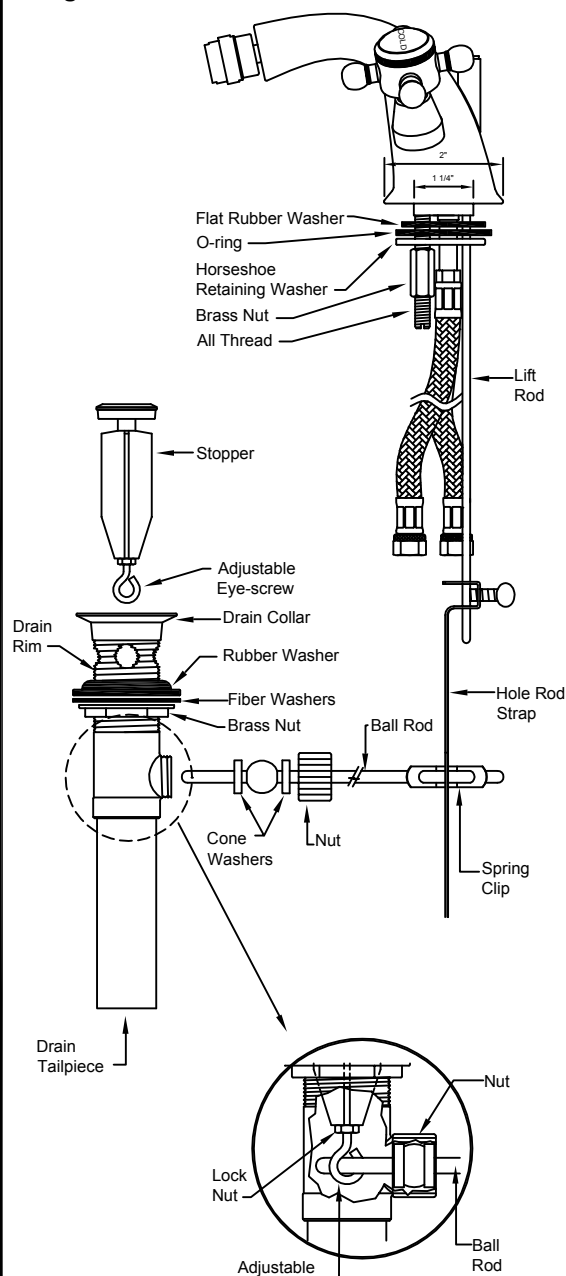


Fig. 3

IMPORTANT CLEANING NOTICE

Please refer to *Finish Care Instructions* for complete cleaning information. Wipe frequently with a soft, damp cloth. **Never use acids, harsh abrasives or detergents.**