



Tel: 714-891-7797
 Fax: 714-891-2478
 Toll Free: 800-822-8855
 www.calfaucets.com

4" CENTERSET

**INSTALLATION
 INSTRUCTIONS**

California Faucets®

IMPORTANT

All *California Faucets*® products are engineered to provide quality performance provided they are installed and operated properly. To fully enjoy the comfort, safety, and reliability of your new CenterSet, please follow the instructions below.

California Faucets reserves the right to make modification and specification changes at any time. Please visit www.calfaucets.com for most current technical data.

J Style Spout

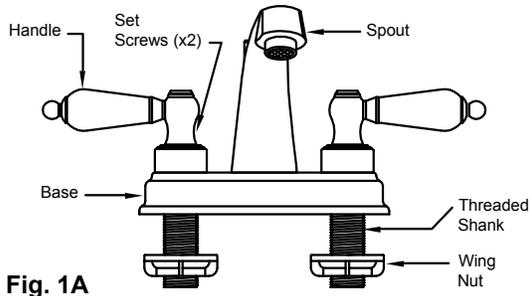


Fig. 1A

Traditional CenterSet

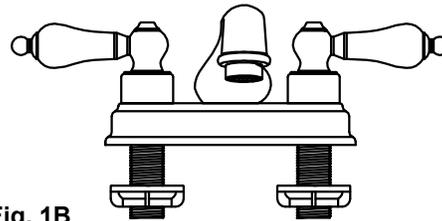


Fig. 1B

All 4" CenterSet faucets meet A112.18.1 - 2.2gpm/8.31 L/min.

*****NOTE: SHUT OFF WATER SUPPLY BEFORE BEGINNING INSTALLATION*****

1

Install faucet:

-Remove wing nuts from threaded shanks and insert faucet through holes in sink or countertop. Re-attach the two plastic wing nuts, align faucet, and tighten firmly from below.

2

Install Handles:

-Attach the handles to the body by tightening the set screws using the allen wrench (provided).

3

Install pop-up assembly.

- Separate drain collar from pop-up assembly.
- Apply silicon caulking to underside of drain collar. **NOTE: Do not use "Plumbers Putty" or any oil based sealants! Use of anything other than silicon caulking will VOID the finish warranty.**
- Insert drain body from underside through sink. Slowly screw on drain collar, align with ball rod hole facing back wall, then gently pull down into sink and firmly tighten brass nut from below.
- Remove tailpiece from drain body and apply teflon tape, approx. 3 to 5 wraps around threads and reinstall into bottom of drain body.
- Insert stopper in collar and hold with eye-screw hole facing back. If necessary, adjust stopper eye-screw height by loosening lock nut and rotating counter-clockwise. Tighten lock nut (**See Fig. 3**).
- Remove spring clip from ball rod.
- Remove nut and cone washers and slide onto end of ball rod.
- Insert ball rod into drain body below so short end of ball rod end fits in stopper eye-screw hole. Snug ball rod nut (do not over tighten). Ball rod must move up & down freely (**See Fig. 3**).
- Insert lift rod through top of spout and then through hole rod strap underneath sink. Tighten thumb-screw of hole rod strap against lift rod and connect to ball rod by gently pinching locking spring clip and sliding one side of spring clip onto ball rod.
- Insert hole strap onto ball rod, then pinch spring clip together to fit on ball rod.

Fig. 2


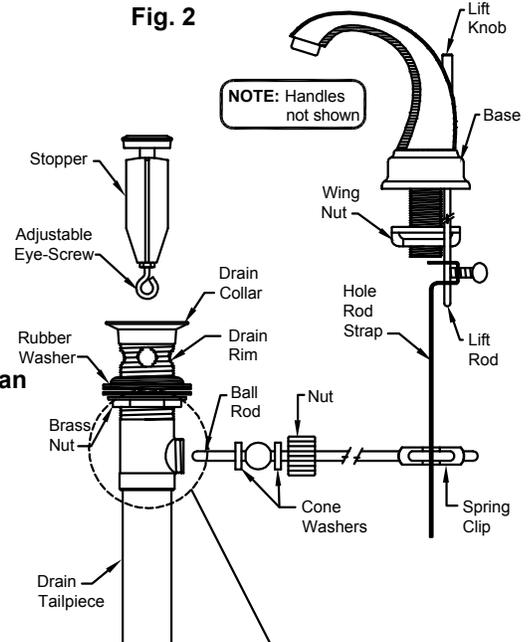


Fig. 3

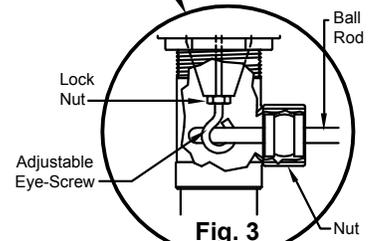

4 Connect faucet to water supply:

IMPORTANT: Flush supply lines of all debris prior to connecting to lavatory valve bodies. Debris remaining in the line will damage valve bodies and cause leaking. Failure to flush the lines could result in voiding the warranty.

-Connect supply risers from the angle stops.

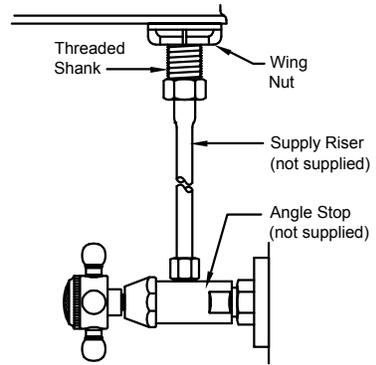


Fig. 4

NOTE:

P-trap, angle stops, and supply risers are not supplied. We recommend genuine Cal-Trim parts available at your authorized *California Faucets*® dealer.

5 Install "P" trap:

-Connect your waste "P" trap to the drain tail piece.

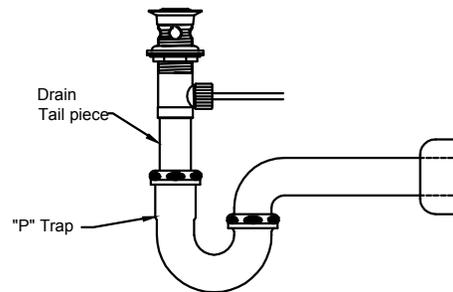


Fig. 5

IMPORTANT CLEANING NOTICE

Please refer to *Finish Care Instructions* for complete cleaning information. Wipe frequently with a soft, damp cloth. *Never use acids, harsh abrasives or detergents.*