




FVN8030

SENZA


INSTALLATION GUIDE

CONTENTS:



Cabinet...(FCB8030).....	PAGE 4 (STEP 5)
Sink.....(FVS8030).....	PAGE 3 (STEP 3)




FVN8030
LIVELLO
INSTALLATION GUIDE

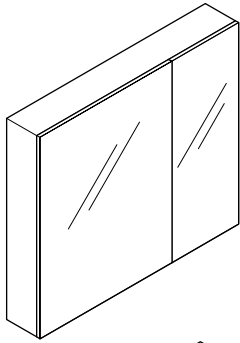


Medicine Cabinet

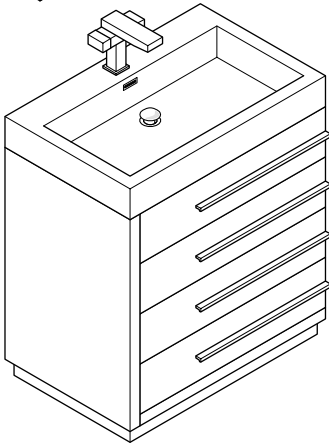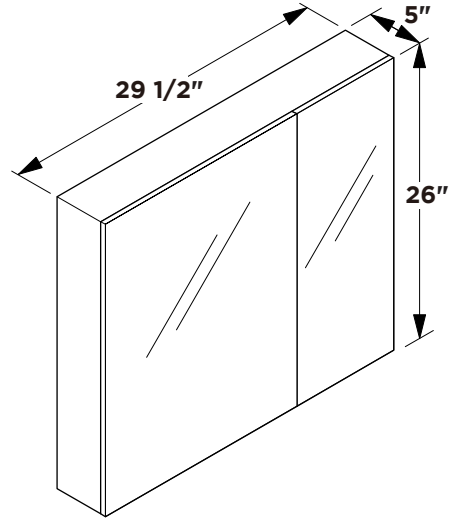

Vanity Front

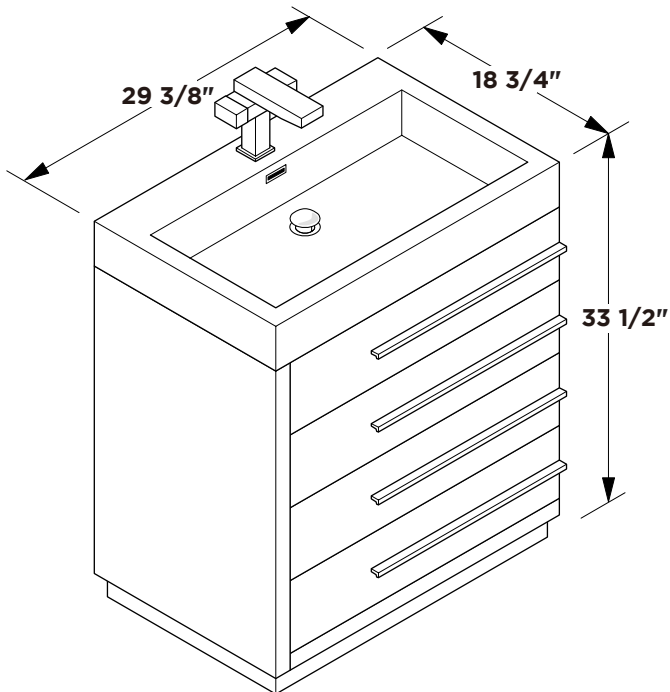


Vanity Back




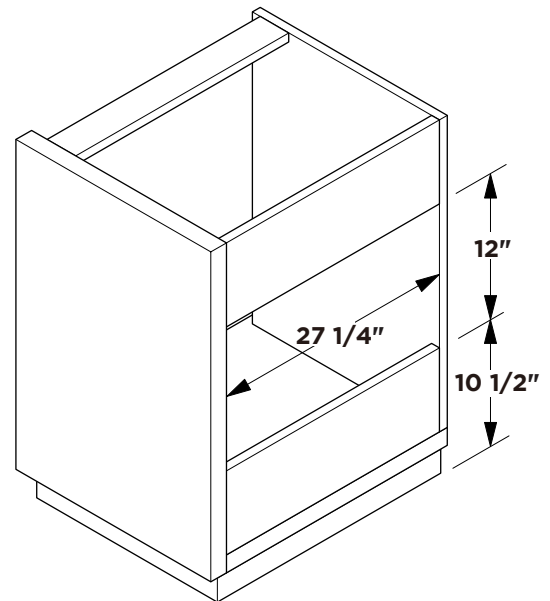


Note: All dimensions and specifications are approximate and subject to change without notice.

TOOLS FOR ASSEMBLY

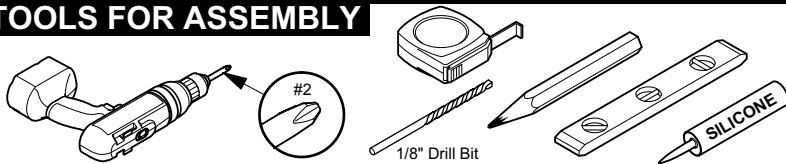


PARTS

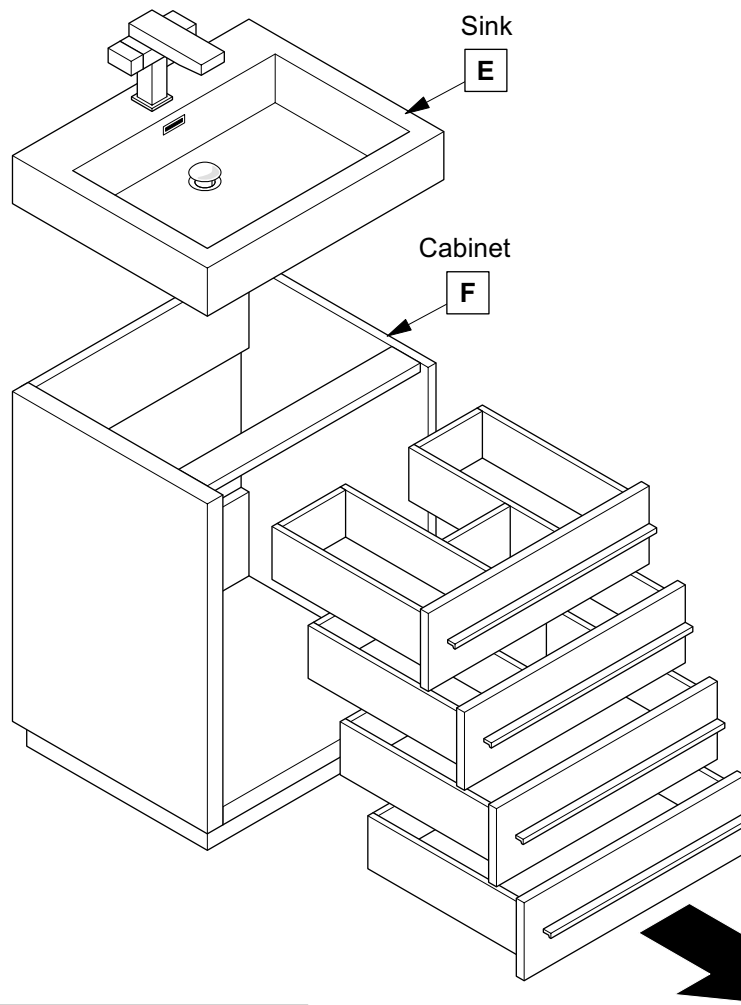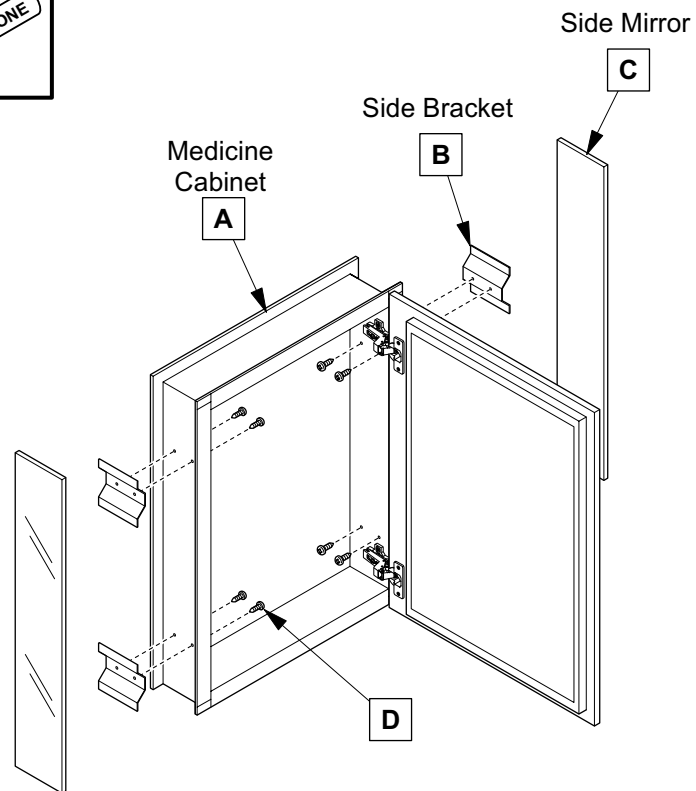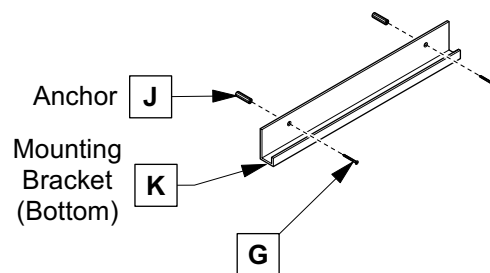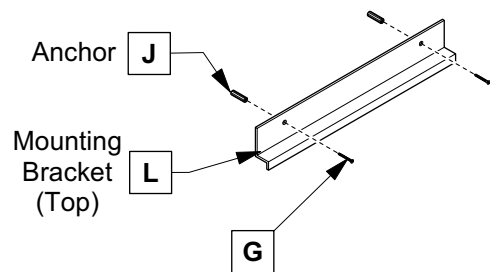


DRAWER REMOVAL & INSTALLATION

REMOVAL

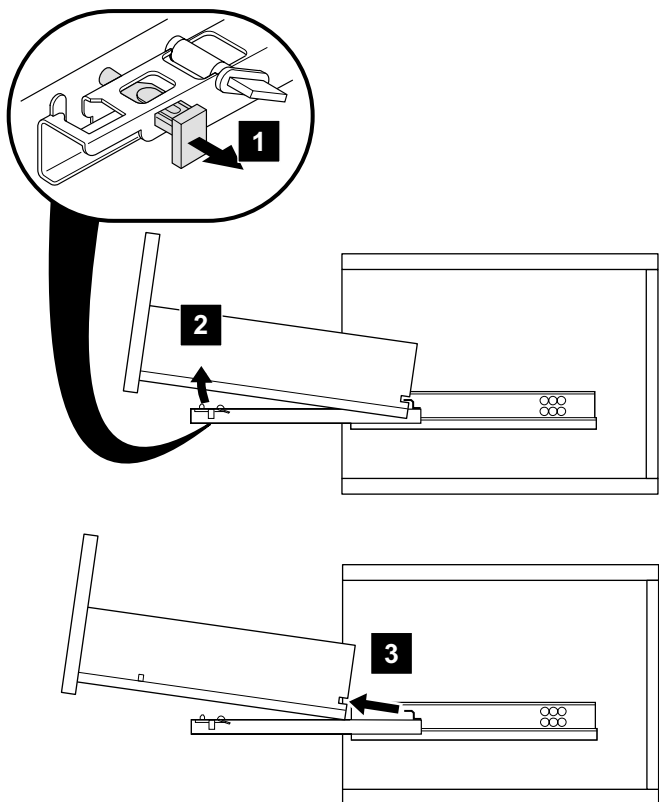


INSTALLATION

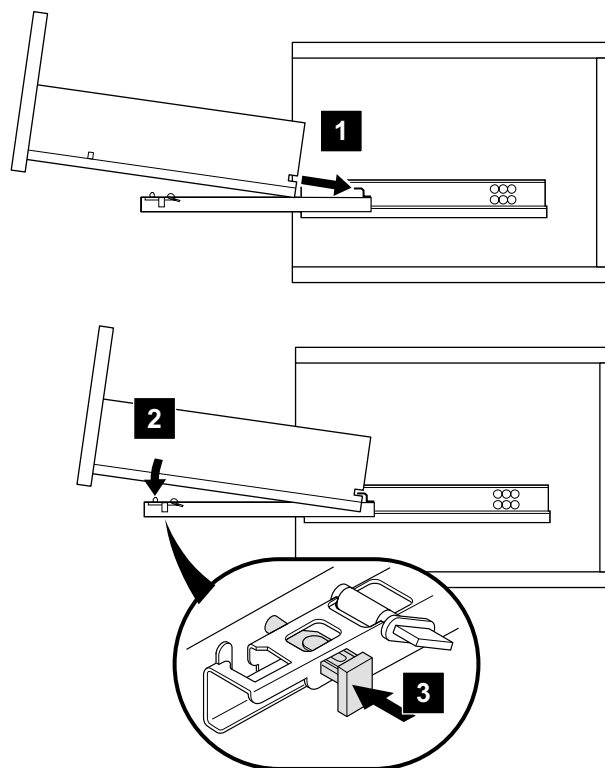


1 Remove drawer (M)


2 Install cabinet (F)

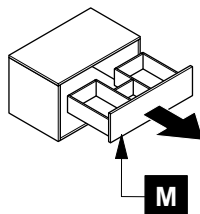

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

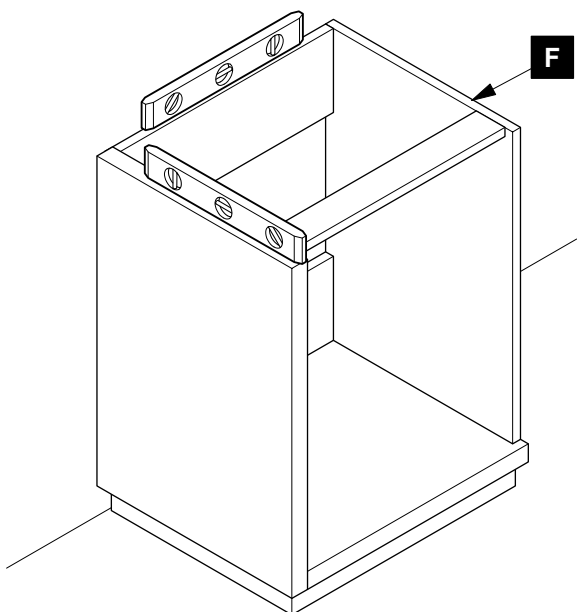

3 Apply silicone and install sink (E)

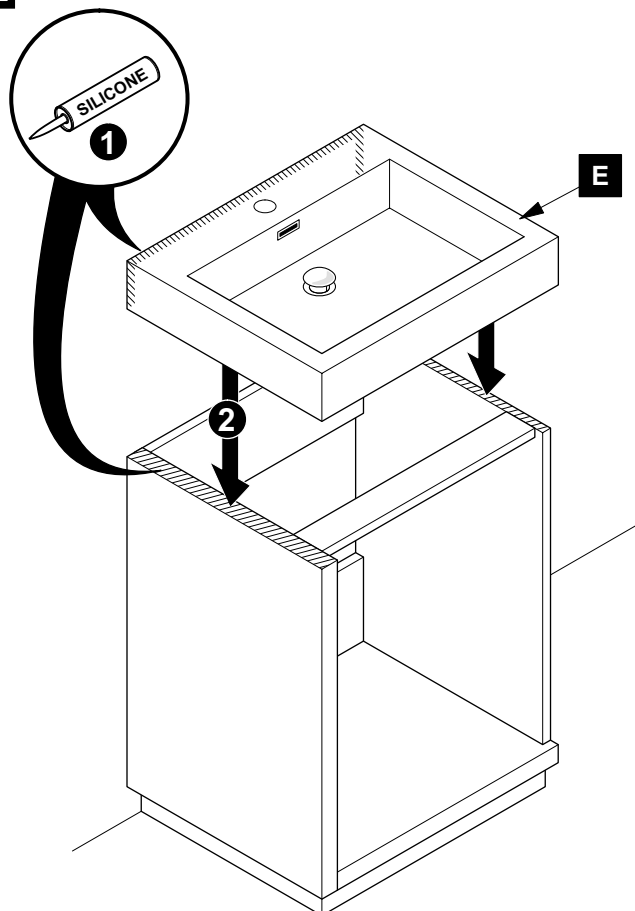



MEDICINE CABINET INSTALLATION

2

Install side mirrors (C)


1

Install side brackets (B)

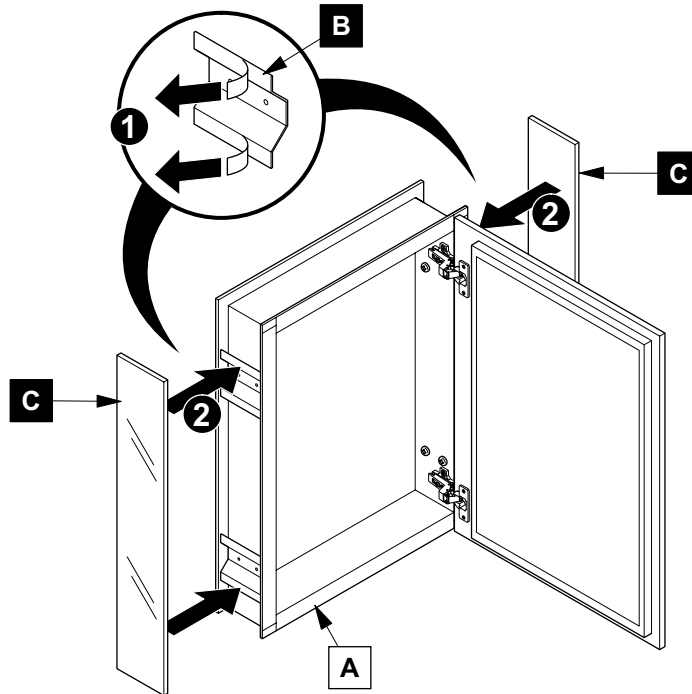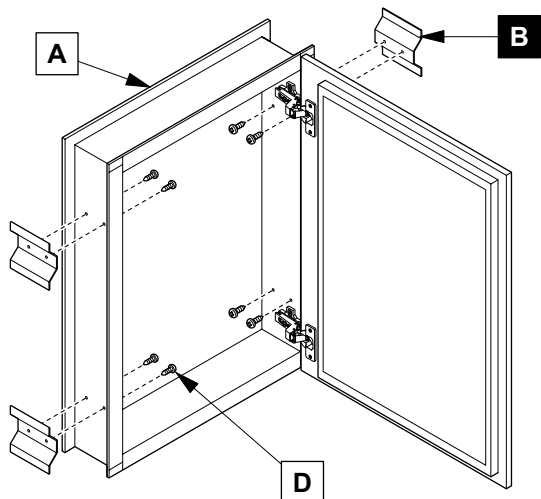


3

Mark cabinet (A) location

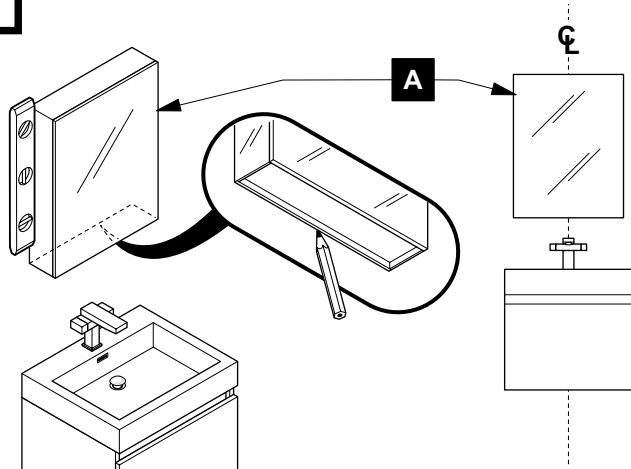

5



Install cabinet (A)

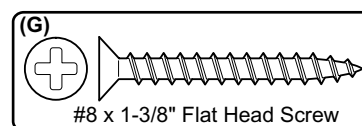

4


Install bottom bracket (K)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

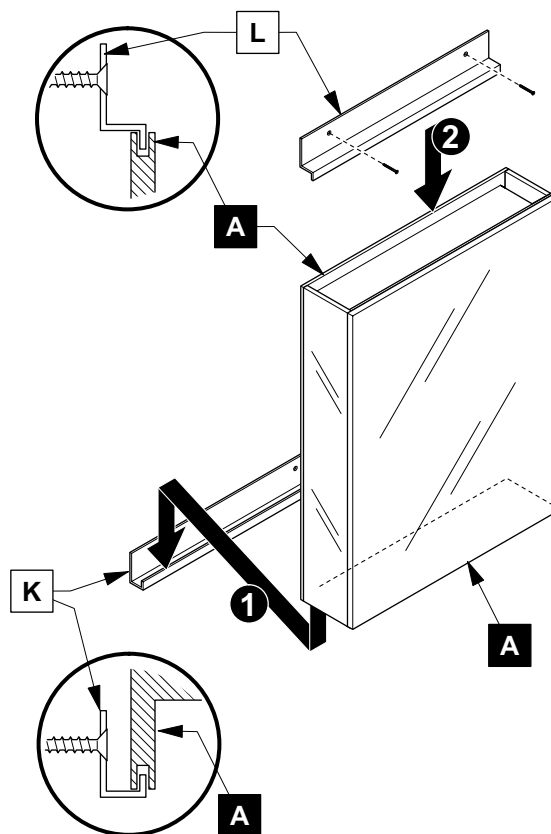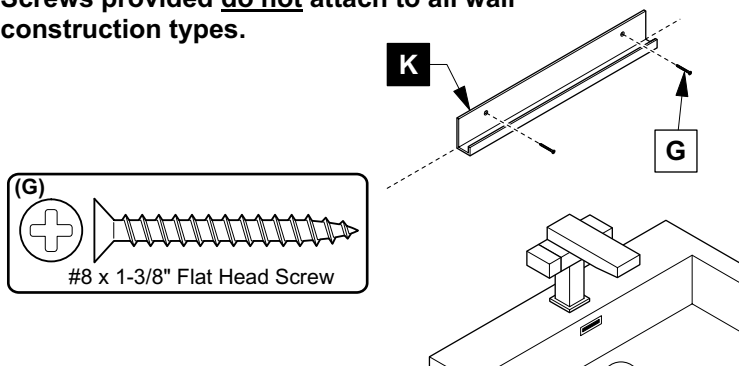


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

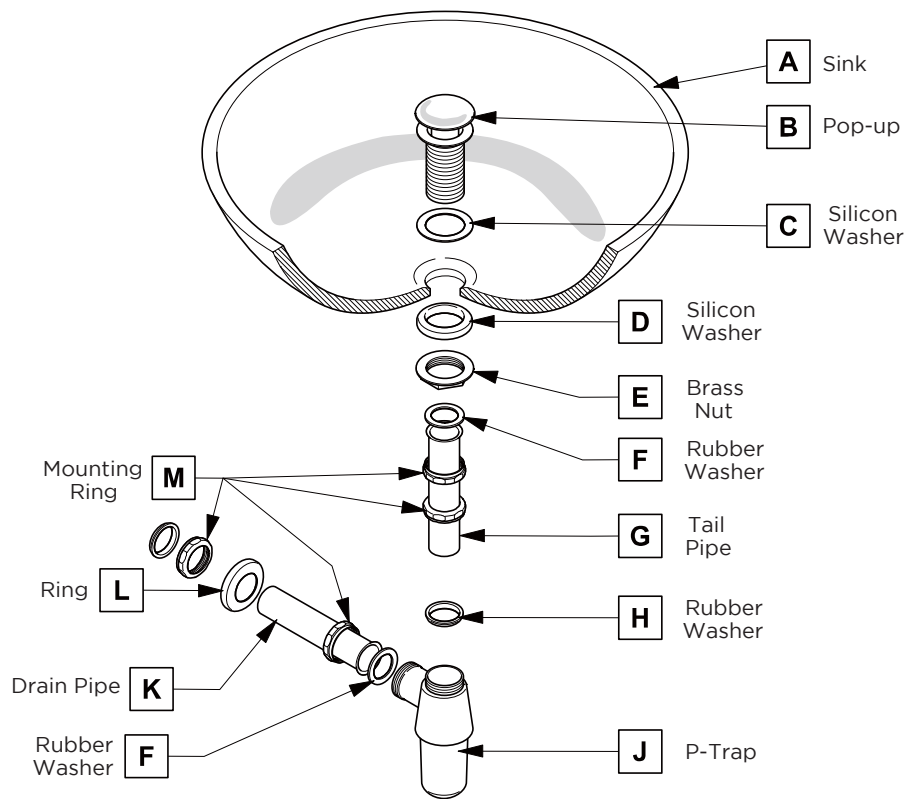


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

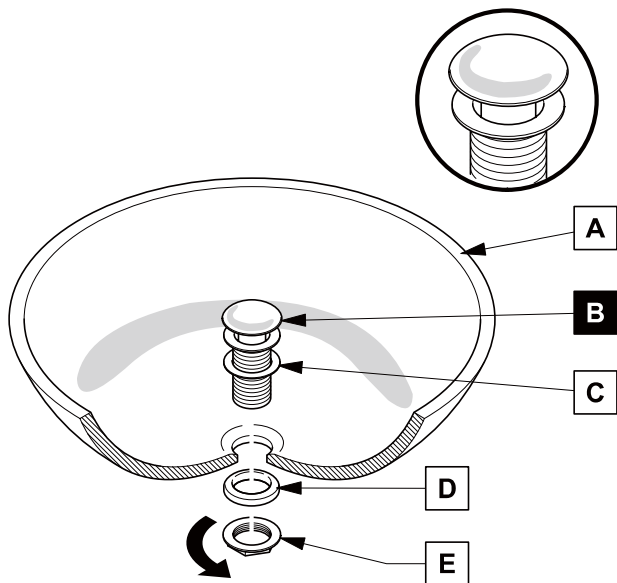

OR


FOR SINKS WITH OVERFLOW

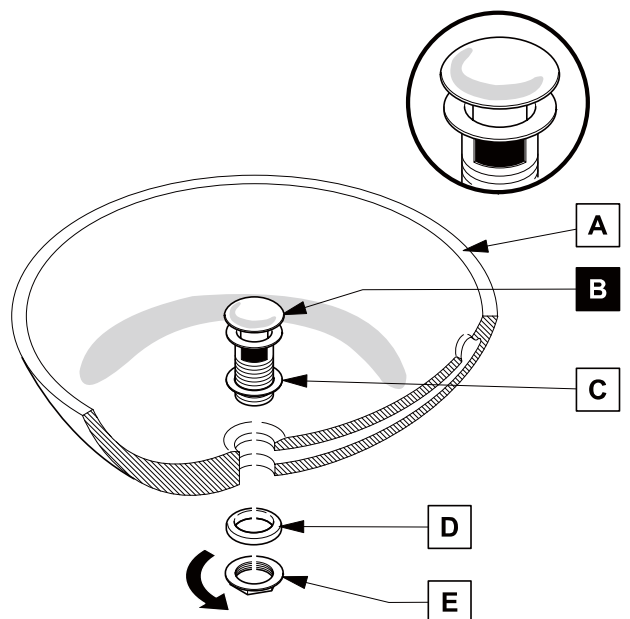

P-TRAP INSTALLATION

1

Install tail pipe (G)

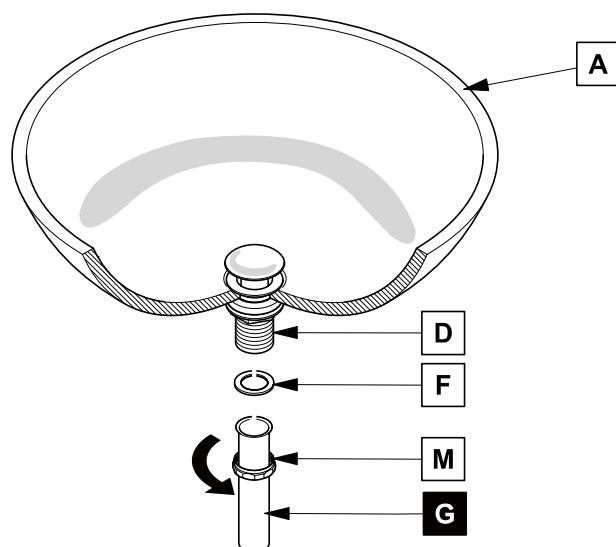

2

Install p-trap (J)

