
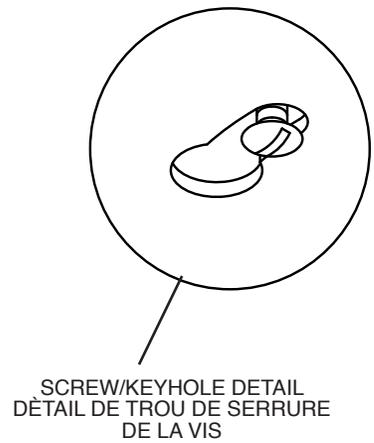


INSTRUCTIONS


For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

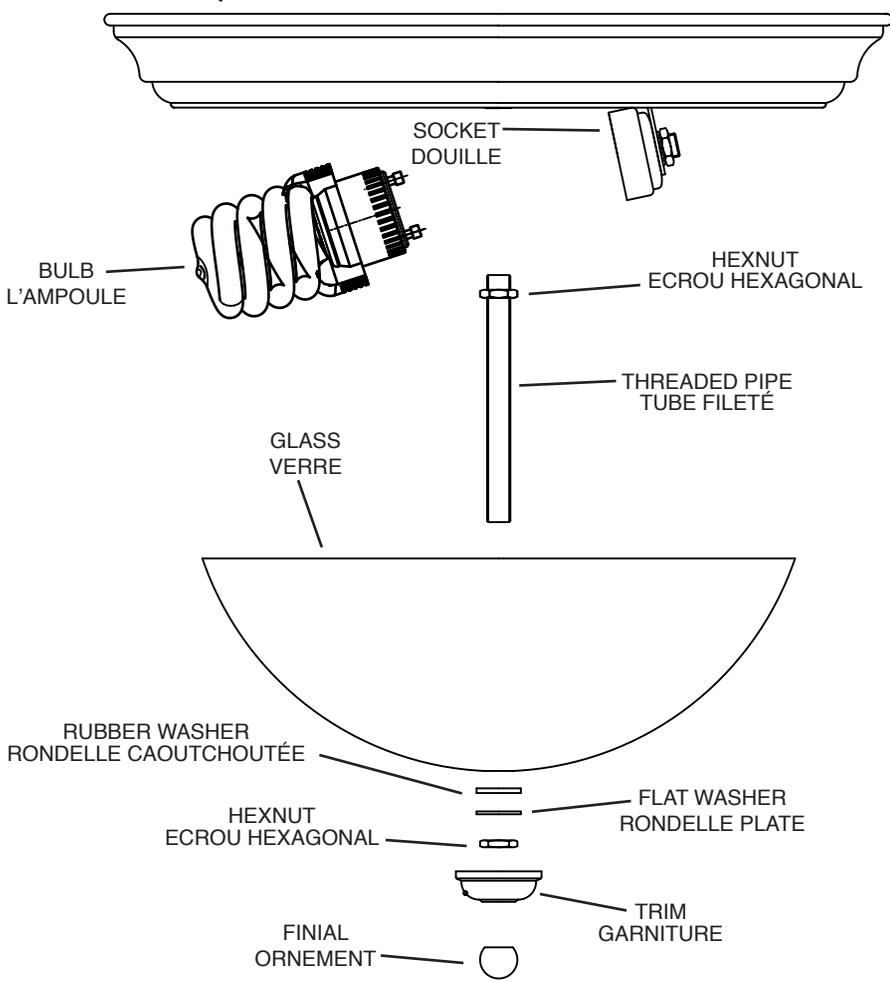

- 1) Turn off power.
- 2) Assemble mounting screws into threaded holes in mounting strap.
- 3) Attach mounting strap to outlet box. (Screws not provided)
- 4) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

| Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
|---|---|
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 5) Push fixture to ceiling so mounting screws can pass through keyhole slots. Turn fixture until screwheads appear as in detail. Tighten screws.
- 6) Push bulb into socket. Turn bulb to the right slightly to lock bulb in place.
- 7) Screw hexnut on to threaded pipe and screw threaded pipe into coupling on bottom of fixture body. Secure threaded pipe in place by tightening hexnut against coupling.
- 8) Raise glass up to fixture carefully passing threaded pipe through hole in glass.
- 9) Slip rubber washer then flat washer over threaded pipe and screw hexnut onto end of threaded pipe. (DO NOT over tighten.)
- 10) Pass trim over threaded pipe and screw finial onto threaded pipe. (DO NOT over tighten.)

- 1) Couper l'alimentation secteur.
- 2) Visser les vis de montage dans les trous filetés du la barrette de montage.
- 3) Visser la barrette de montage à la boîte de jonction. (Vis non fournies).
- 4) Effectuer les raccordements électriques (les cosses ne sont pas fournies). Si les fils du lustre ne sont pas noir et blanc, se reporter au tableau ci-dessous pour effectuer les raccordements convenables et câbler en conséquence.

| Connecter le fil noir ou rouge de la boîte | Connecter le fil blanc de la boîte |
|---|--|
| A Noir | A Blanc |
| *Au cordon parallèle (rond et lisse) | *Au cordon parallèle (à angles droits et strié) |
| Au transparent, doré, marron, ou noir sans fil distinctif | Au transparent, doré, marron, ou noir avec un fil distinctif |
| Fil isolé (sauf fil vert) avec conducteur en cuivre | Fil isolé (sauf fil vert) avec conducteur en argent |

*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).



- 5) Pousser l'élément au plafond de manière à ce que les vis puissent entrer dans les trous des fentes. Tourner l'élément jusqu'à ce que les vis apparaissent comme sur le détail. Fixer en place avec les écrous.
- 6) Pousser l'ampoule dans la douille. Tourner l'ampoule légèrement sur la droite pour bloquer.
- 7) Visser l'écrou hexagonal sur le tube fileté puis visser le tube dans l'accouplement sur l'extrémité inférieure du luminaire. Fixer le tube fileté en serrant l'écrou hexagonal contre l'accouplement.
- 8) Soulever le verre vers le luminaire en passant soigneusement le tube fileté par le trou dans le verre.
- 9) Passer la rondelle caoutchoutée puis la rondelle plate sur le tube fileté et visser l'écrou hexagonal sur l'extrémité du tube fileté. (NE PAS serrer avec excès).
- 10) Passer la garniture sur le tube fileté et visser l'ornement sur le tube fileté. (NE PAS serrer avec excès).