**INSTRUCTIONS**
For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

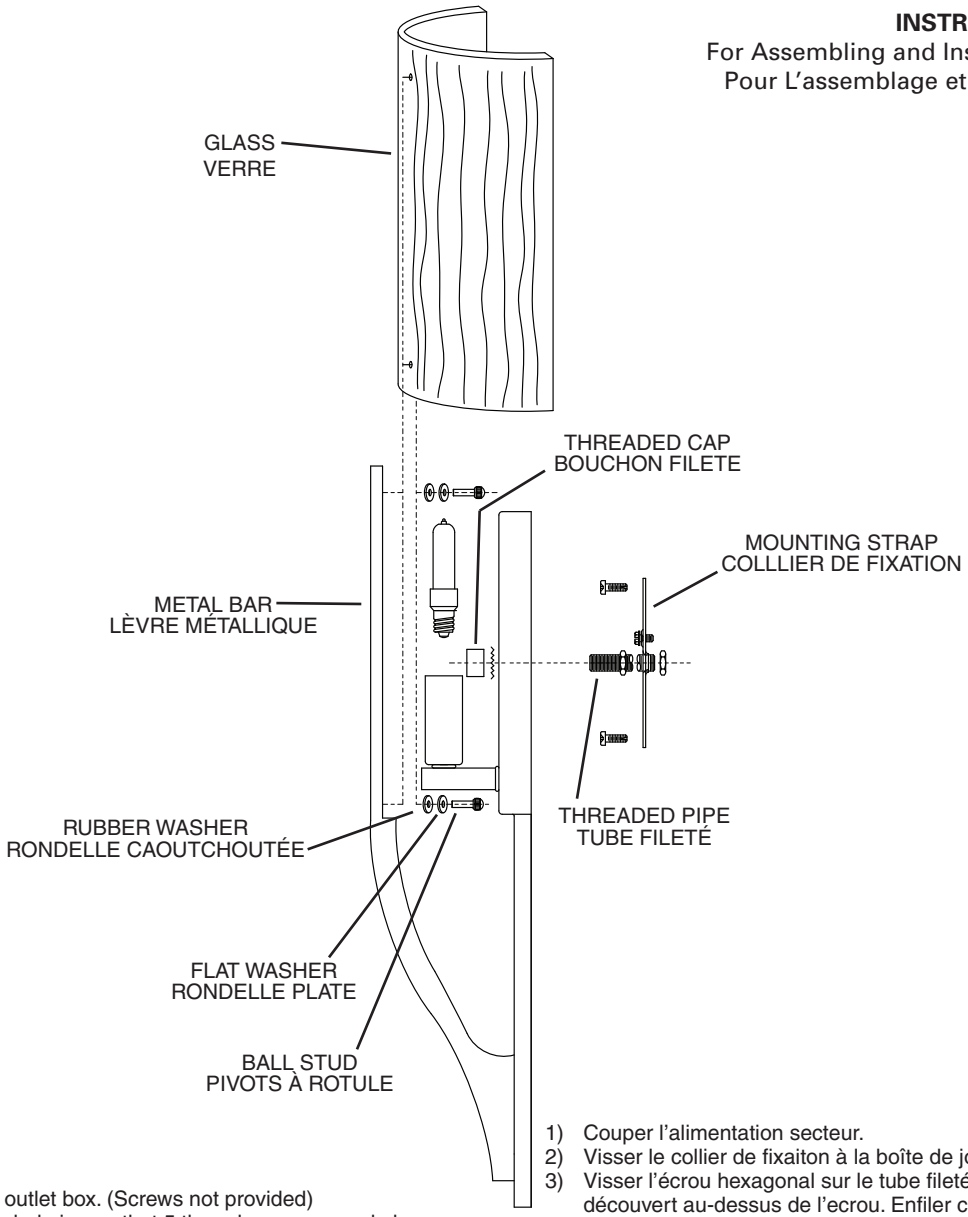


1) Turn off power.
2) Attach mounting strap to outlet box. (Screws not provided)
3) Thread hexnut onto threaded pipe so that 5 threads are exposed above hexnut. Thread that end of threaded pipe into mounting strap and tighten hexnut against mounting strap.
4) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

| Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
|---|---|
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




5) Push fixture to wall, carefully passing threaded pipe through hole.
6) Secure fixture to wall using threaded cap.
8) Insert recommended bulb.
9) Set glass behind metal bar.
10) Lower glass down onto lip of metal bar aligning holes in glass with holes in metal bar.
11) Pass one flat washer then one rubber washer over end of each ball stud.
12) From back side of glass, thread ball studs into holes in glass and into holes in bar.
13) Tighten ball studs to secure glass in place. (DO NOT over tighten.)

1) Couper l'alimentation secteur.
2) Visser le collier de fixaiton à la boîte de jonction (vis non fournies).
3) Visser l'écrou hexagonal sur le tube fileté de façon a laisser cinq fils a découvert au-dessus de l'ecrou. Enfiler cette extrémite du tube filete \ dans le collier de faxation et serrer l'ecrou contre le colllier de fixation.
4) Connecter les fils (connecteurs non fournis). Se reporter au tableau ci-dessous pour faire les connexions.

| Connecter le fil noir ou rouge de la boite | Connecter le fil blanc de la boîte |
|---|---|
| A Noir | A Blanc |
| *Au cordon parallèle (rond et lisse) | *Au cordon parallele (à angles droits el strié) |
| Au bransparent, doré, marron, ou noir sans fil distinctif | Au transparent, doré, marron, ou noir avec un til distinctif |
| Fil isolé (sauf fil vert) avec conducteur en cuivre | Fil isolé (sauf fil vert) avec conducteur en argent |

*Remarque: Avec emploi d'un fil paralléle (SPT I et SPT II). Le fil neutre est á angles droits ou strié et l'autre fil doit étre rond ou lisse (Voir le schéma).




5) Pousser l'applique contre le mur, et faire passer les vis de fixaiton dans les trous de passage en procédant avec précautions.
6) Fixer l'applique contre le mur à l'aide des rondelles freins et du bouchon filete.
7) Introduire les ampoules recommandées.
9) Placer le verre derrière la barre métallique.
10) Abaisser le verre sur la lèvre métallique en prenant soin d'aligner les trous situés dans le verre aux trous situés dans la barre métallique.
11) Passer une rondelle plate puis une rondelle caoutchoutée sur l'extrémité de chacun des pivots à rotule.
12) Depuis la partie arrière du verre, visser les pivots à rotule dans les trous du verre puis dans les trous de la barre.
13) Resserrer les pivots à rotule pour bien fixer le verre. (NE PAS serrer avec excès).